

# Air Quality

## AQ 100



### "Select" key

See table

"Functions available from main screen"

### "Function" key

1x : "Hold" : measure holding

2x : "Min/Max" : display of minimum and maximum values from **channel 1** since last request.

3x : "Min/Max" : display of minimum and maximum values from **channel 2** since last request.

4x : **Back** to held measure.

### "On / off" key

ON : Switch-on


OFF : Switch-off

Escape : Return to previous screen

### "Backlight" key

1x -  Level 1

2x -  Level 2

3x -  No backlight



Once the instrument is switched on , wait for dashes to delete  
----- before measuring or setting


## Functions available from main screen



Once the instrument is switched on , wait for dashes to delete  
----- before measuring or setting

**Select  
unit**

1x




Press on key to scroll down units

⇨ Validate with

**Automatic  
shut-off**

2x




Press on key to scroll down minutes

⇨ Validate with

**Beep**

3x




Press on key to activate or deactivate

⇨ Validate with

## ■ How to change battery

1. Remove the front part at the back of the device
2. Remove the old battery
3. Insert the new battery in accordance with proper polarity  
draw inside the housing.
4. Replace the front.

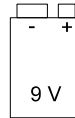

Ntang – AQ100 – 01/08 A – We reserve the right to modify the characteristics of our products without notice.



**E Instruments Group LLC**  
172 Middletown Blvd - Suite B201  
Langhorne, PA 19047  
Tel.: 215 750 1212  
Fax: 215 750 1399  
e-mail: info@einstrumentsgroup.com

Distributed by: